



75Ω RG6/U BNC Connector

3 piece BNC Crimp Male

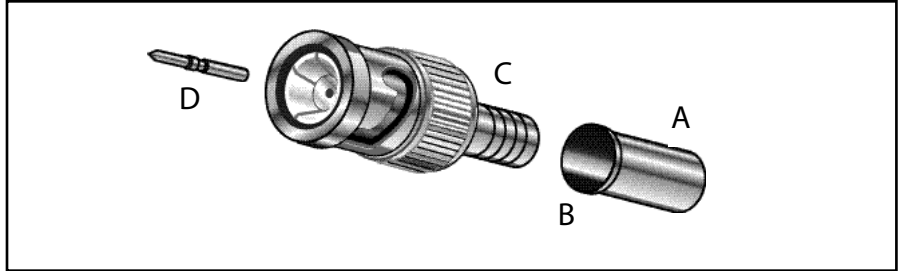

PART NO.	CABLE TYPE	A CRIMP FERRULE HEX SIZE	B FERRULE I.D.	C CONNECTOR Body I.D.	D CONTACT I.D.	JACKET O.D.	WPW CABLES
CN-BM73-5	RG6/U	.310"	.405"	.305"	.044"	.275" 6.99mm	6350 6325 6373 806

Assembly Instructions:

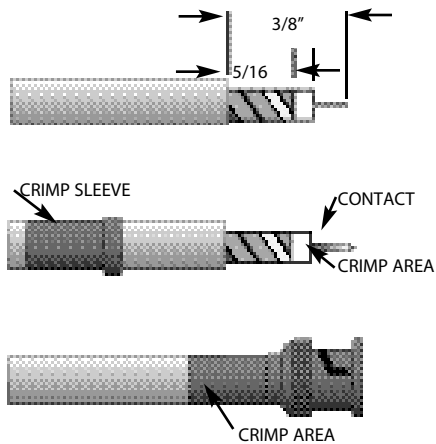

1. Trim Cables as shown, taking care not to nick the inner Conductor or braid.
2. Slip crimp sleeve over cable. Place inner conductor into contact, take care that inner dielectric is square and touching center contact. Crimp with the appropriate Crimp tool.
3. Flair outer braid, slip the dielectric sleeve over the dielectric. Push the contact or center pin into the connector body until a gentle snap is felt, indicating the contact is in place. Slide the crimp sleeve in place being sure it butts against rear of connector body. Crimp with the appropriate tool. Crimp only once to the back of the crimp sleeve using the appropriate Crimp.

PART NO.	CABLE	CRIMP BRAID HEX	Center Pin Crimp	CRIMP TOOL	STRIP TOOL
CN-BM73-5	RG6/U	.310"	.068"	TL-107	TL-7503